


The Ideal Replacement For Conventional Rubber V-Belts!

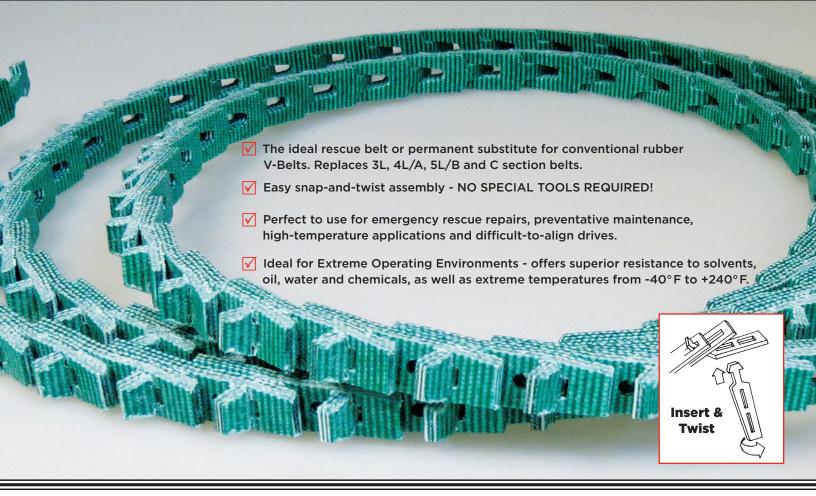

Where To Use Accu-Link®

- ▼ Temporary or Permanent substitution for conventional Rubber V-Belts.
- Any conventional V-Belt application where it is difficult to install an endless belt avoid costly labor intensive machine teardowns.
- Conventional V-Belt applications where chemical and high-temp resistance is needed.
- ✓ Mobile Service Vehicles where carrying a large inventory of belts is not practical.



Jason Industrial Inc.® A MEGADYNE GROUP CO.

340 Kaplan Drive • Fairfield, NJ 07004-6004 973-227-4904 • FAX: 973-227-1651

Distribution Center • Carol Stream, IL 60188 630-752-0600 • FAX: 630-752-0680

ACCU-LINK® ADJUSTABLE LINK V-BELTS

- Solve V-Belt Drive Problems Quickly, Accurately and Permanently.
- Ideal for Diverse Operating Environments.
- Installation is a Snap!



Accu-Link® Adjustable Link V-Belts

Features	- Benefits
Durable urethane coating	Increased life and durability
Rugged polyester fabric	Strength and longer life; maximum horsepower
Can be assembled in any length	Readily available in emergencies - reduces inventory
Snap-and-twist assembly - no tools needed	Easy assembly, a fast and reliable alternative, minimizes downtime
Chemical and high temp resistance	Dependability in harsh environments
Segmented link construction	Rolls on to drive pulleys like chain - no cords to break Reduced vibration over conventional V-Belts
Versatility	Can be used in any industry, hundreds of applications Can be used as singles or multiple V-Belts
Horsepower capacity	Same power ratings as conventional V-Belts
Interchangeability	Can be installed on existing pulleys with no changes in set-up

No Special Tools Required - Assembles in Seconds!



1. Hold belt with tabs pointing outward.



2. Place end tabs through two links at once.



3. Flex belt further and insert second tab through end link by twisting tab with thumb.



4. Ensure tab returns to position across belt. Reverse belt so tabs run inside.

Installation:

- 1. Before installing, turn belt inside out and couple the belt.
- 2. Place endless Accu-Link* V-Belt in the nearest small sheave groove.
- 3. Extend belt and place in the nearest large sheave groove.
- 4. Manually turn the Accu-Link® V-Belt until it is in groove all around drive. Do not jog motor.
- 5. Continue to manually work the belt from groove to groove.
- 6. Repeat until all grooves are filled.
- 7. Tension belts using the same method for equivalent size conventional rubber belt.

Disassembly



 Hold belt upside down. Bend back as far as possible, hold with one hand. Twist one tab 90° parallel with slot.





3. Rotate belt end with tab 90°



4. Pull belt through the

NOTE: Unlike conventional V-Belts, Accu-Link® can be rolled onto pulleys - no cord to break.



