

KP1308A1

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4451971	4451972	4451978	4451979	4455253	8300433
8300434	8300440	8300441	8300442	8300443	

Connects with the following oven control board part numbers.

1057546	4451856	4451991	4452890	4452898	4453664
8302967	8301917	8302152	8302319	W10406070	W10438751

Used in the following oven models.

GBD277PDB09	GBD277PDB10	GBD277PDB2	GBD277PDB3	GBD277PDB4	GBD277PDB5
GBD277PDB6	GBD277PDB7	GBD277PDB8	GBD277PDQ09	GBD277PDQ10	GBD277PDQ2
GBD277PDQ2	GBD277PDQ3	GBD277PDQ4	GBD277PDQ5	GBD277PDQ6	GBD277PDQ7
GBD277PDQ8	GBD277PDS09	GBD277PDS10	GBD277PDS2	GBD277PDS3	GBD277PDS4
GBD277PDS5	GBD277PDS6	GBD277PDS7	GBD277PDS8	GBD277PDT09	GBD277PDT10
GBD277PDT7	GBD277PDT8	GBD307PDB10	GBD307PDB2	GBD307PDB3	GBD307PDB4
GBD307PDB5	GBD307PDB6	GBD307PDB7	GBD307PDQ09	GBD307PDQ10	GBD307PDQ2
GBD307PDQ3	GBD307PDQ4	GBD307PDQ5	GBD307PDQ6	GBD307PDQ7	GBD307PDS09
GBD307PDS10	GBD307PDS2	GBD307PDS4	GBD307PDS5	GBD307PDS6	GBD307PDS7
GBD307PDT09	GBD307PDT10	GBD307PDT2	GBD307PDT3	GBD307PDT4	GBD307PDT5
GBD307PDT6	GBD307PDT7				