

KP1308A3

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4448467	4448468	4451965	4451966	4451967	4451968
4451973	4451974	8300427	8300428	8300429	8300430
8300435	8300436	8300516	8300531	8300533	

Connects with the following oven control board part numbers.

1057546	4451856	4451991	4452890	4452898	4453664
8302967	8301917	8302152	8302319	W10406070	W10438751

Used in the following oven models.

RBD245PDB10	RBD245PDB11	RBD245PDB12	RBD245PDB14	RBD245PDB15	RBD245PDB7
RBD245PDB8	RBD245PDB9	RBD245PDQ10	RBD245PDQ11	RBD245PDQ12	RBD245PDQ14
RBD245PDQ15	RBD245PDQ7	RBD245PDQ8	RBD245PDQ9	RBD245PDS12	RBD245PDS14
RBD245PDS15	RBD245PDT10	RBD245PDT11	RBD245PDT12	RBD245PDT14	RBD245PDT15
RBD245PDT8	RBD245PDT9	RBD275PDB10	RBD275PDB11	RBD275PDB12	RBD275PDB13
RBD275PDB14	RBD275PDB15	RBD275PDB7	RBD275PDB8	RBD275PDB9	RBD275PDQ10
RBD275PDQ11	RBD275PDQ12	RBD275PDQ13	RBD275PDQ14	RBD275PDQ15	RBD275PDQ7
RBD275PDQ8	RBD275PDQ9	RBD275PDS12	RBD275PDS14	RBD275PDS15	RBD275PDT10
RBD275PDT11	RBD275PDT12	RBD275PDT13	RBD275PDT14	RBD275PDT15	RBD275PDT8
RBD275PDT9	RBD305PDB10	RBD305PDB11	RBD305PDB12	RBD305PDB13	RBD305PDB14
RBD305PDB15	RBD305PDB7	RBD305PDB8	RBD305PDB9	RBD305PDQ10	RBD305PDQ11
RBD305PDQ12	RBD305PDQ13	RBD305PDQ14	RBD305PDQ15	RBD305PDQ7	RBD305PDQ8
RBD305PDQ9	RBD305PDS12	RBD305PDS14	RBD305PDS15	RBD305PDT11	RBD305PDT12
RBD305PDT13	RBD305PDT14	RBD305PDT15			