

KP1308B1

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4451349	4451350	4451351	4451352	4452705	4452706
4452707	4452843	4452844	4452845	4452846	4456311
4456312	4456313	8300448	8300449	8300450	8300453
8300454	8300455	8300456	8300457	8300515	8300529
8300532	8300535				

Connects with the following oven control board part numbers.

961211	4452892	8186024	4452900	4453193	

Used in the following oven models.

RBS245PDQ1	RBS245PDB10	RBS245PDB11	RBS245PDB12	RBS245PDB13	RBS245PDB8
RBS245PDB9	RBS245PDQ10	RBS245PDQ11	RBS245PDQ12	RBS245PDQ13	RBS245PDQ8
RBS245PDQ9	RBS245PDS12	RBS245PDT10	RBS245PDT11	RBS245PDT12	RBS245PDT13
RBS245PDT8	RBS245PDT9	RBS275PDB10	RBS275PDB11	RBS275PDB12	RBS275PDB13
RBS275PDB8	RBS275PDB9	RBS275PDQ10	RBS275PDQ11	RBS275PDQ12	RBS275PDQ13
RBS275PDQ8	RBS275PDQ9	RBS275PDS12	RBS275PDT10	RBS275PDT11	RBS275PDT12
RBS275PDT13	RBS305PDB10	RBS305PDB11	RBS305PDB12	RBS305PDB13	RBS305PDB8
RBS305PDB9	RBS305PDQ10	RBS305PDQ11	RBS305PDQ12	RBS305PDQ13	RBS305PDQ8
RBS305PDQ9	RBS305PDS12	RBS305PDT10	RBS305PDT11	RBS305PDT12	RBS305PDT13
RBS305PDT8	RBS305PDT9	RBS305PDZ10	RBS305PDZ8	RBS305PDZ9	RS610PXGN1
RS610PXGN2	RS610PXGN3	RS610PXGV2	RS610PXGV3	RS610PXGV7	RS610PXGV8
RS610PXGW1	RS610PXGW2	RS610PXGW3	RS610PXGW7	RS610PXGW8	RS610PXHW1
RS675PXGB4	RS675PXGB5	RS675PXGB6	RS675PXGB7	RS675PXGB8	RS675PXGB9
RS675PXGQ4	RS675PXGQ5	RS675PXGQ6	RS675PXGQ7	RS675PXGQ8	RS675PXGQ9
RS675PXGT5	RS675PXGT7	RS675PXGT8	RS675PXGT9	RS675PXGZ4	RS675PXGZ5
RS675PXGZ6	RS696PXGB4	RS696PXGB5	RS696PXGB6	RS696PXGB7	RS696PXGB8
RS696PXGB9	RS696PXGQ4	RS696PXGQ5	RS696PXGQ6	RS696PXGQ7	RS696PXGQ8
RS696PXGQ9					