

KP1308C1

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4450722	4450723	4451319	4451320	4451322	4451323
4452040	4452041	4452868			

Connects with the following oven control board part numbers.

4448876	4452242				

Used in the following oven models.

GBD277PDB0	GBD277PDB1	GBD277PDQ0	GBD277PDQ1	GBD277PDS1	GBD307PDB0
GBD307PDB1	GBD307PDQ0	GBD307PDQ1	GBD307PDS1	GBD307PDT1	GBD277PDB1
GDB277PDQ1	RBD277PDB1	RBD277PDB2	RBD277PDB4	RBD277PDQ1	RBD277PDQ2
RBD277PDQ4	RBD307PDB1	RBD307PDB2	RBD307PDQ1	RBD307PDQ2	RBD307PDQ4