

INSTALLATION MANUAL

FULL-CASED MULTI-POSITION FOR
COOLING/HEAT PUMPS

MODELS: MC

FULL-CASED UPFLOW/COUNTERFLOW FOR
COOLING/HEAT PUMPS

MODELS: FC

PARTIAL-CASED UPFLOW FOR COOLING/HEAT PUMP

MODELS: PC



LIST OF SECTIONS

SAFETY	1	CONDENSATE DRAIN CONNECTIONS	6
GENERAL INFORMATION	2	REFRIGERANT LINE CONNECTION	7
COIL METERING DEVICES	4	COIL CLEANING	7
COIL INSTALLATION	4	AIR SYSTEM ADJUSTMENT	7
DUCT CONNECTIONS	6	INSTALLATION VERIFICATION	8

LIST OF FIGURES

Component Location - Coil MC & FC	2	Upflow - PC Coil Installation with Furnace	5
Component Location - Coil PC	2	Condensate Deflector on Vertical Drain Pan	6
TXV Bulb Installation	4	Condensate Deflector on Horizontal Drain Pan Edge	6
Proper Bulb Location	4	S-Clip Installation	7
Duct Flanges - Coil FC/MC	4	Pressure Check	8
Vertical Applications with Furnaces	5	TXV Check List	8
Horizontal Right Application with Furnaces	5	Drain Traps	8
Horizontal Left Application with Furnaces	5	Location of Trapped and Plugged Drain Connections	8

LIST OF TABLES

Dimensions - MC Coils	2	Coil Air Flow Limits	4
Dimensions - FC Coils	3	Coil Projection Dimensions - PC Coils	5
Dimensions - PC Coils	3	Air Flow Data - Static Pressure Drop	7

SECTION I: SAFETY



This is a safety alert symbol. When you see this symbol on labels or in manuals, be alert to the potential for personal injury.

Understand and pay particular attention to the signal words **DANGER**, **WARNING**, or **CAUTION**.

DANGER indicates an **imminently** hazardous situation, which, if not avoided, **will result in death or serious injury**.

WARNING indicates a **potentially** hazardous situation, which, if not avoided, **could result in death or serious injury**.

CAUTION indicated a potentially hazardous situation, which, if not avoided may result in minor or moderate injury. It is also used to alert against unsafe practices and hazards involving only property damage.

WARNING

Improper installation may create a condition where the operation of the product could cause personal injury or property damage. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage. Refer to this manual for assistance or additional information, consult a qualified installer or service agency.

CAUTION

This product must be installed in strict compliance with the enclosed installation instructions and any applicable local, state, and national codes including, but not limited to building, electrical, and mechanical codes.

WARNING

The furnace area must not be used as a broom closet or for any other storage purposes, as a fire hazard may be created. Never store items such as the following on, near or in contact with the furnace.

1. Spray or aerosol cans, rags, brooms, dust mops, vacuum cleaners or other cleaning tools.
2. Soap powders, bleaches, waxes or other Cleaning compounds; plastic items or containers; gasoline, kerosene, cigarette lighter fluid, dry cleaning fluids or other volatile fluid.
3. Paint thinners and other painting compounds.
4. Paper bags, boxes or other paper products

Never operate the furnace with the blower door removed. To do so could result in serious personal injury and/or equipment damage.

SECTION II: GENERAL INFORMATION

This instruction covers the installation of the following coils with 80+ or 90+ AFUE furnaces or MA/MX/MV air moving systems.

The coils have sweat connect fittings. All coils are shipped with a low psi nitrogen holding charge.

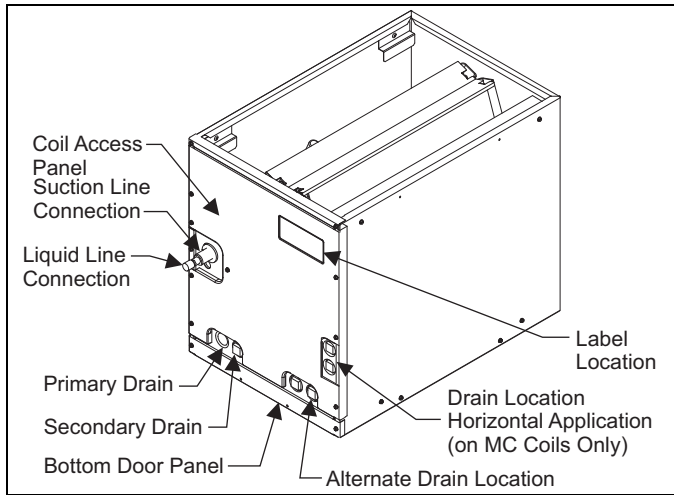


FIGURE 1: Component Location - Coil MC & FC
INSPECTION

As soon as a coil is received, it should be inspected for possible damage during transit. If damage is evident, the extent of the damage should be noted on the carrier's delivery receipt. A separate request for inspection by the carrier's agent should be made in writing. See Local Distributor for more information. Check drain pan for cracks or breakage.

TABLE 1: Dimensions - MC Coils

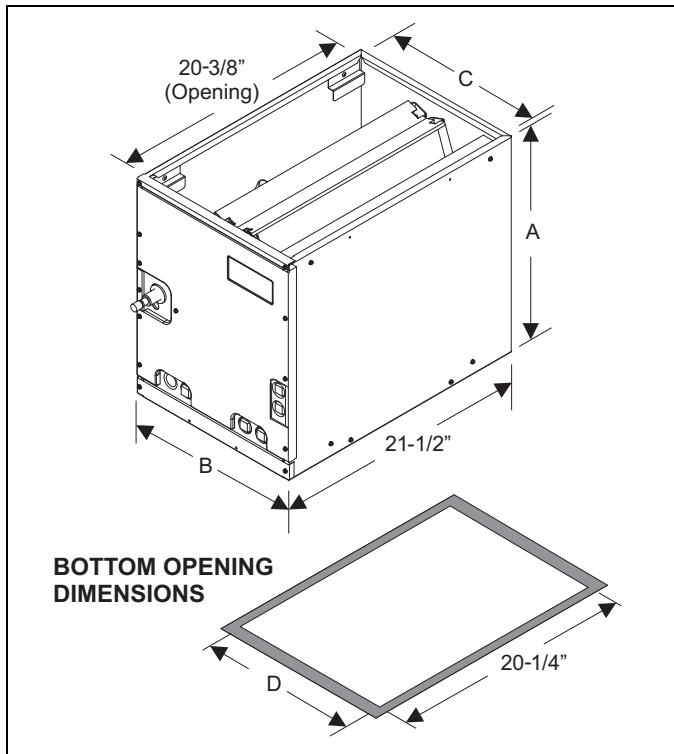


FIGURE 2: Component Location - Coil PC

CLEARANCES

DURING INSTALLATION

Clearance must be provided for:


1. Refrigerant piping and connections
2. Maintenance and servicing access - including cleaning the coil
3. Condensate drain line
4. Filter removal / change
5. Removal of coil assembly

Models	Dimensions ¹				Refrigerant Connections ²	
	Height	Width	Opening Widths		Line Size	
	A	B	C	D	Liquid	Vapor
MC18A	22	14-1/2	13-3/8	13-1/2	3/8	3/4
MC18B	22	17-1/2	16-3/8	16-1/2		
MC24A	26-1/2	14-1/2	13-3/8	13-1/2		
MC24B	26-1/2	17-1/2	16-3/8	16-1/2		
MC30A	26-1/2	14-1/2	13-3/8	13-1/2		
MC30B	26-1/2	17-1/2	16-3/8	16-1/2		
MC32A	22	14-1/2	13-3/8	13-1/2		
MC35B	22	17-1/2	16-3/8	16-1/2		
MC35C	22	21	19-7/8	20		
MC36A	26-1/2	14-1/2	13-3/8	13-1/2		
MC36B	26-1/2	17-1/2	16-3/8	16-1/2		
MC36C	26-1/2	21	19-7/8	20		
MC37A	26-1/2	14-1/2	13-3/8	13-1/2	7/8	7/8
MC42B	32	17-1/2	16-3/8	16-1/2		
MC42C	32	21	19-7/8	20		
MC43B	26-1/2	17-1/2	16-3/8	16-1/2		
MC43C	26-1/2	21	19-7/8	20		
MC48C	32	21	19-7/8	20		
MC48D	32	24-1/2	23-3/8	23-1/2		
MC60D	32	24-1/2	23-3/8	23-1/2		
MC62D	36	24-1/2	23-3/8	23-1/2		

1. All dimensions are in inches.

2. Refrigerant line sizes may require larger lines for extended line lengths. See Application Data part number 247077.


TABLE 2: Dimensions - FC Coils

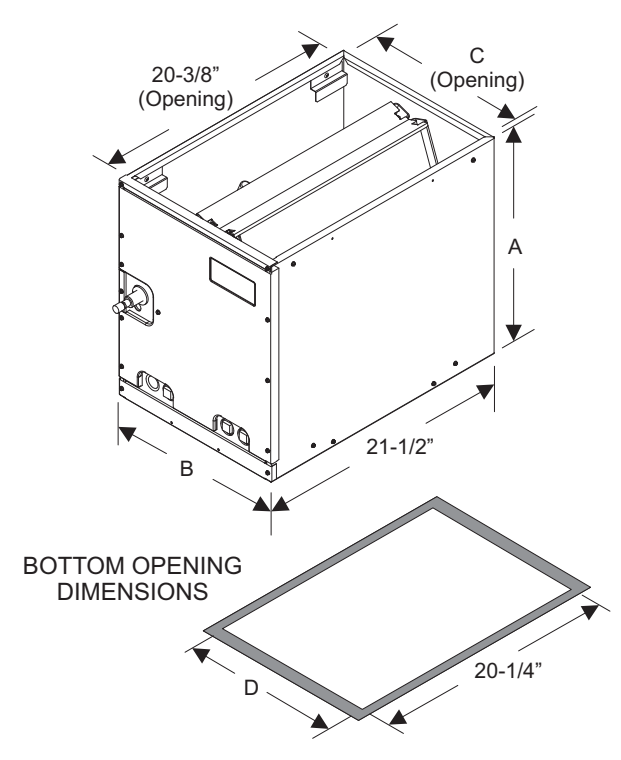

Models	Dimensions ¹				Refrigerant Connections ²	
	Height	Width	Opening Widths		Line Size	
	A	B	C	D	Liquid	Vapor
FC18A	18	14-1/2	13-3/8	13-1/2	3/8	3/4
FC18B	18	17-1/2	16-3/8	16-1/2		
FC24A	22	14-1/2	13-3/8	13-1/2		
FC24B	22	17-1/2	16-3/8	16-1/2		
FC30A	22	14-1/2	13-3/8	13-1/2		
FC30B	22	17-1/2	16-3/8	16-1/2		
FC32A	20	14-1/2	13-3/8	13-1/2		
FC35B	20	17-1/2	16-3/8	16-1/2		
FC35C	20	21	19-7/8	20		
FC36A	24-1/2	14-1/2	13-3/8	13-1/2		
FC36B	24-1/2	17-1/2	16-3/8	16-1/2		
FC36C	24-1/2	21	19-7/8	20		
FC37A	24-1/2	14-1/2	13-3/8	13-1/2		
FC42B	28	17-1/2	16-3/8	16-1/2		
FC42C	28	21	19-7/8	20		
FC43B	24-1/2	17-1/2	16-3/8	16-1/2		
FC43C	24-1/2	21	19-7/8	20		
FC48C	28	21	19-7/8	20		
FC48D	28	24-1/2	23-3/8	23-1/2		
FC60C	28	21	19-7/8	20		
FC60D	28	24-1/2	23-3/8	23-1/2		
FC62D	32	24-1/2	23-3/8	23-1/2		
FC64D	36	24-1/2	23-3/8	23-1/2		
					7/8	

1. All dimensions are in inches.
 2. Refrigerant line sizes may require larger lines for extended line lengths. See Application Data part number 247077.

TABLE 3: Dimensions - PC Coils

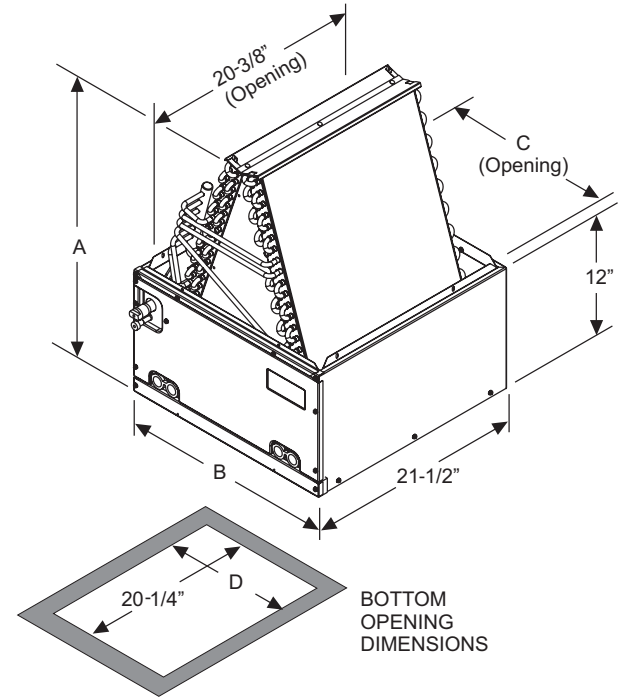

Models	Dimensions ¹				Refrigerant Connections ²	
	Height	Width	Opening Widths		Line Size	
	A	B	C	D	Liquid	Vapor
PC18A	17-3/4	14-1/2	13-3/8	13-1/2	3/8	3/4
PC18B	17	17-1/2	16-3/8	16-1/2		
PC24A	21-7/8	14-1/2	13-3/8	13-1/2		
PC24B	21-3/8	17-1/2	16-3/8	16-1/2		
PC30A	21-7/8	14-1/2	13-3/8	13-1/2		
PC30B	21-3/8	17-1/2	16-3/8	16-1/2		
PC32A	20	14-1/2	13-3/8	13-1/2		
PC35B	18-7/8	17-1/2	16-3/8	16-1/2		
PC35C	18-3/4	21	19-7/8	20		
PC36A	23-7/8	14-1/2	13-3/8	13-1/2		
PC36B	23-1/8	17-1/2	16-3/8	16-1/2		
PC36C	22-7/8	21	19-7/8	20		
PC37A	23-7/8	14-1/2	13-3/8	13-1/2		
PC42B	27-5/8	17-1/2	16-3/8	16-1/2		
PC42C	27-1/8	21	19-7/8	20		
PC43B	23-1/8	17-1/2	16-3/8	16-1/2		
PC43C	22-5/8	21	19-7/8	20		
PC48C	25-3/8	21	19-7/8	20		
PC48D	24-5/8	24-1/2	23-3/8	23-1/2		
PC60C	27-1/2	21	19-7/8	20		
PC60D	26-7/8	24-1/2	23-3/8	23-1/2		
					7/8	

1. All dimensions are in inches.
 2. Refrigerant line sizes may require larger lines for extended line lengths. See Application Data part number 247077.

LIMITATIONS

These coils should be installed in accordance with all national and local safety codes.

TABLE 4: Coil Air Flow Limits

Coil Size	Outdoor Unit Tons	CFM Limits	
		Minimum	Maximum
18	1-1/2	525	675
24	1-1/2	525	675
	2	700	900
30, 32	2	700	900
	2-1/2	875	1125
35	2-1/2	875	1125
	3	1050	1200
36, 37	2-1/2	875	1125
	3	1050	1350
42	3	1050	1350
	3-1/2	1225	1575
43	3	1050	1350
	3-1/2	1225	1575
48	3	1050	1350
	3-1/2	1225	1575
	4	1400	1800
60, 62, 64	4	1600	1800
	5	1750	2250

SECTION III: COIL METERING DEVICES

An orifice or a TXV to be installed in the field. Refer to installation manual with TXV kit. It is recommended to install the orifice or TXV kit prior to installation of coil in cabinet and brazing line sets.

Consult the outdoor installation guide for outdoor units that require an orifice as a metering device for the indoor coil. The orifice and the Schraeder core are supplied with the outdoor unit. Install Schraeder core in the suction line Schraeder body and cap with the supplied plastic cap.

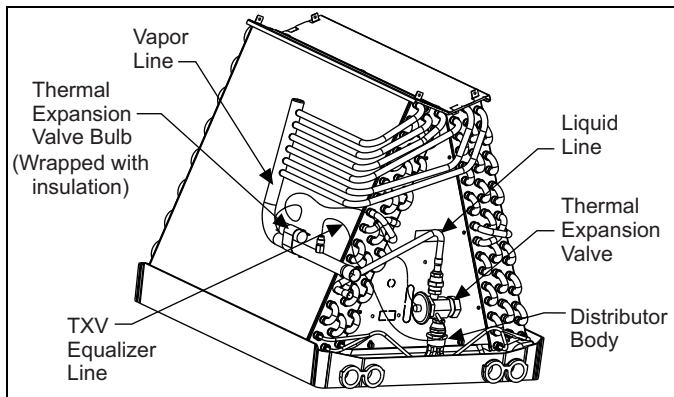


FIGURE 3: TXV Bulb Installation

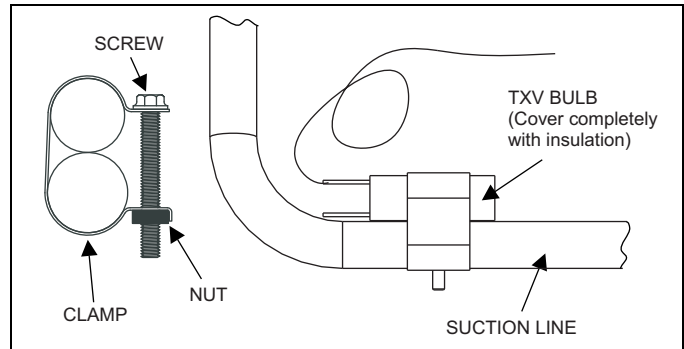


FIGURE 4: Proper Bulb Location

CAUTION

COIL UNDER PRESSURE.

Relieve pressure by depressing schrader stem. Coil requires orifice or TXV to be added. See outdoor unit documentation for correct orifice or TXV to be used.

NOTICE

The coil should be open to the air for no more than 2 minutes to keep moisture and contaminants from entering the system. If the coil cannot be brazed into the refrigeration system in that time, the ends should be temporarily closed or plugged. For a short term delay, use masking tape over the ends of the copper tubing to close the tube to the air. For a longer term delay, use plugs or caps. There is no need to purge the coil if this procedure is followed.

SECTION IV: COIL INSTALLATION

DUCT FLANGES

Four flanges are provided to attach ductwork to the coil. These flanges are rotated down for shipment. In order to use the flanges, remove the screw holding an individual flange, rotate the flange so it is in the upward position and reinstall the screw then repeat this for all 4 flanges.

If the flanges are not used, they must remain in the down position as shipped.

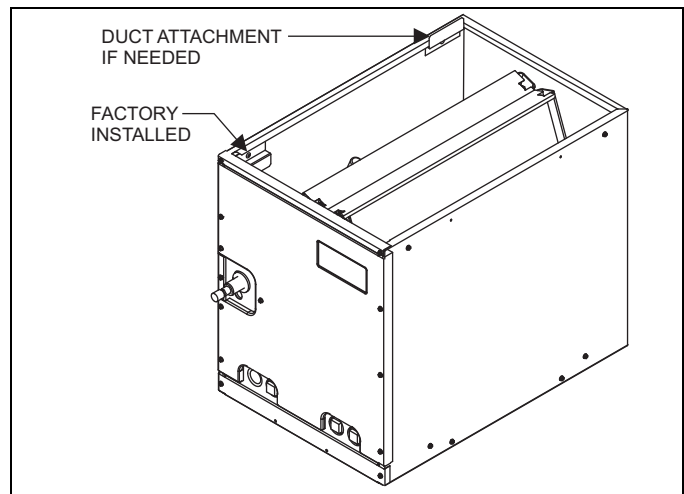


FIGURE 5: Duct Flanges - Coils FC/MC

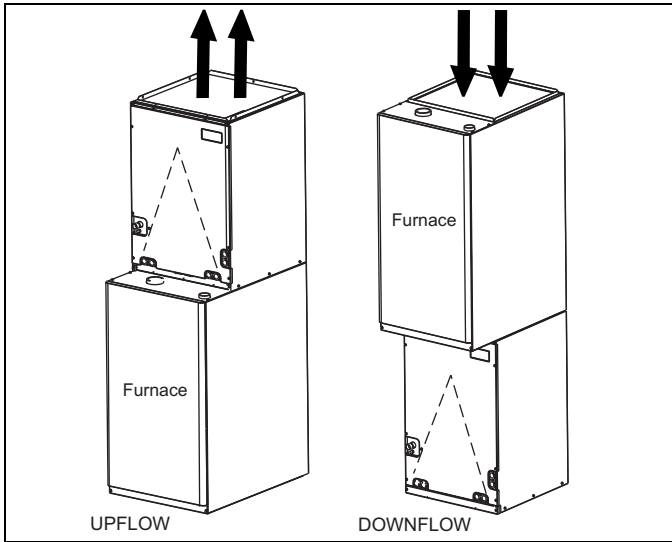


FIGURE 6: Vertical Applications with Furnaces

For upflow or downflow applications (FC/MC Models):

These coils are factory shipped for installation in either upflow or downflow applications with a minor conversion.

1. Remove and reposition the coil duct flanges as shown in figure 5 if needed.
2. Position the coil on the furnace opening (or the furnace on the coil for downflow) as shown in Figure 6.
3. Place the ductwork over the coil (or furnace) duct flanges and secure.
4. Check for air leakage between the furnace and coil casing and seal appropriately. Three tie plates are provided with the coils. If needed, secure the coil to the furnace using these tie plates.
5. See sections on "Refrigerant Line Connections" and "Condensate Drain Connections" for further installation instruction.

For horizontal applications (MC models only):

MC model coils are supplied ready to be installed in a horizontal position. A horizontal drain pan is factory installed.

1. Remove and reposition the coil duct flanges as shown in figure 5 if needed.
2. Position the coil and furnace as shown in Figure 7.
3. Place the ductwork over the coil or furnace duct flanges and secure.
4. Check for air leakage between the furnace and coil casing and seal appropriately. Three mounting plates are provided with the coils. The mounting plates must be used to secure the top edges of the furnace and coil together. See figures 7 and 8.
5. See sections on "Refrigerant Line Connections" and "Condensate Drain Connections" for further installation instruction.

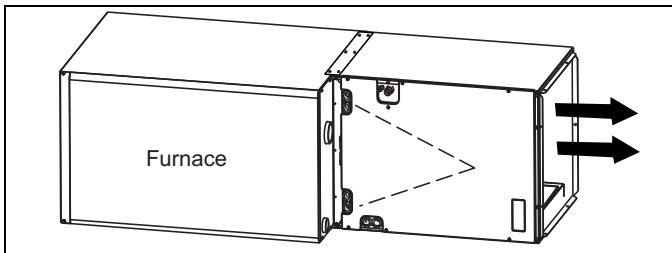


FIGURE 7: Horizontal Right Application with Furnaces

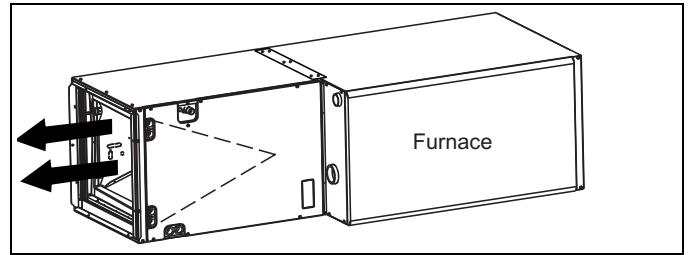


FIGURE 8: Horizontal Left Application with Furnaces

FURNACE ASSEMBLY - PC

The PC coils are designed for installation on top of upflow furnaces only.

If the coil is used with a furnace of a different size, use a 45° transition to allow proper air distribution through the coil.

1. Remove and reposition the coil duct flanges as shown in figure 5 if needed.
2. Position the coil casing over the furnace opening as shown in Figure 9.
3. Place the ductwork over the coil duct flange and secure.
4. Check for air leakage between the furnace and coil casing and seal appropriately.

NOTICE

Refer to the heat pump add-on control instruction before installing an add-on heat pump coil.

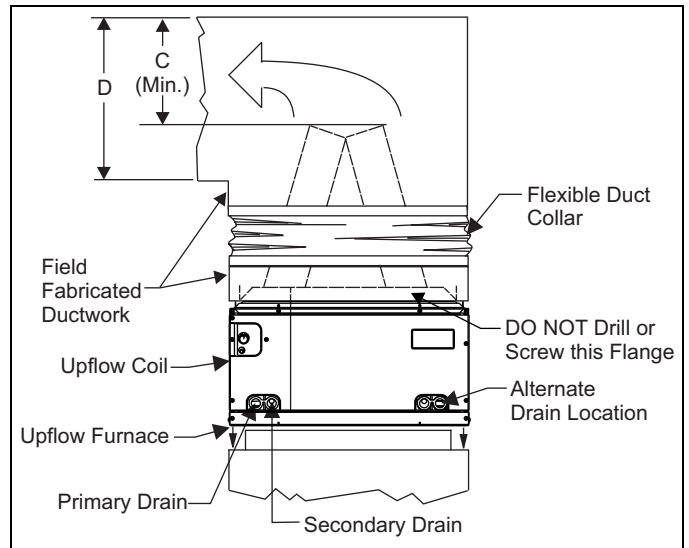


FIGURE 9: Upflow - PC Coil Installation with Furnace

TABLE 5: Coil Projection Dimensions - PC Coils

COIL SIZE	DIMENSION "C" INCH
PC18	3-1/2
PC24	4-1/2
PC30, PC32, PC35	4-1/2
PC42, PC43, PC36, PC37	5-1/2
PC48	6-1/2
PC60	9

Dimension "C" should be at least 2/3 of dimension "D". See Figure 9.

CRITICAL COIL PROJECTION

The coil assembly must be located in the duct such that a minimum distance is maintained between the top of the coil and the top of the duct. Refer to Table 5.

SECTION V: DUCT CONNECTIONS

Air supply and return may be handled in one of several ways best suited to the installation. Upflow, horizontal or downflow applications may be used.

The vast majority of problems encountered with combination heating and cooling systems can be linked to improperly designed or installed duct systems. It is therefore highly important to the success of an installation that the duct system be properly designed and installed.

Use flexible duct collars to minimize the transmission of vibration/noise into the conditioned space.

WARNING

Use 1/2" screws to connect ductwork to unit. If pilot holes are drilled, drill only through field duct and unit flange.

Where return air duct is short, or where sound may be a problem, sound absorbing glass fiber should be used inside the duct. Insulation of duct work is a must where it runs through an unheated space during the heating season or through an uncooled space during the cooling season. The use of a vapor barrier is recommended to prevent absorption of moisture from the surrounding air into the insulation. The supply air duct should be properly sized by use of a transition to match unit opening. All ducts should be suspended using flexible hangers and never fastened directly to the structure. Duct work should be fabricated and installed in accordance with local and/or national codes. This includes the standards of the National Fire Protection Association for Installation of Air-Conditioning and Ventilating Systems, NFPA No. 90B.

CAUTION

Equipment should never be operated without filters.

SECTION VI: CONDENSATE DRAIN CONNECTIONS

All drain lines should be pitched away from unit drain pan and should be no smaller than the coil drain connection.

Route the drain line so that it doesn't interfere with accessibility to the coil, furnace, air handling system or filter and will not be exposed to freezing temperatures.

Instruct the owner that the evaporator coil drain pan should be inspected and cleaned regularly to prevent odors and assure proper drainage.

NOTICE

When the coil is installed in an attic or above a finished ceiling, an auxiliary drain pan must be provided under the coil as is specified by most local building codes.

Coils should be installed level or pitched slightly toward the drain end. Suggested pitch should not exceed 1/4-inch per foot of coil.

If the coil is provided with a secondary drain it should be piped to a location that will give the occupant a visual warning that the primary drain is clogged. If the secondary drain is not used it must be capped.

CAUTION

Avoid Double Trapping.

CAUTION

Threaded drain connections should be hand tightened, plus no more than 1 turn.

DO NOT use Teflon™ tape, "pipe dope", or other sealants. The use of a sealant may cause damage and premature failure of the drain pan.

NOTICE

If the coil is installed in a draw-thru application (modular air handler), it is recommended to trap the primary and secondary drain line. If the secondary drain line is not used, it must be capped.

SUCTION FEEDER TUBE CONDENSATE DEFLECTOR

Upflow or Downflow

No action required. See Figure 10.

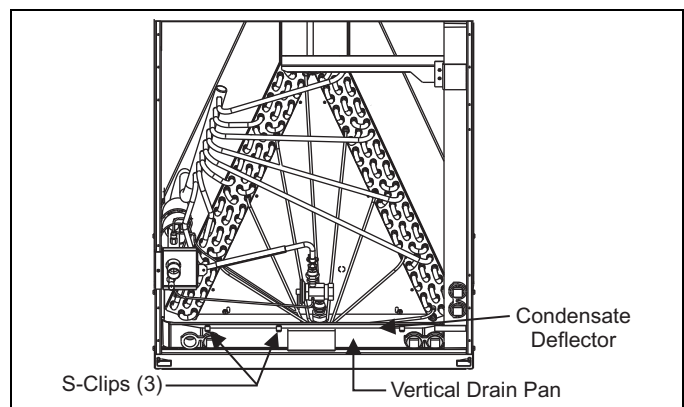


FIGURE 10: Condensate Deflector on Vertical Drain Pan

Horizontal Left or Right

Use an appropriate tool to pry out water deflector with two or three s-clips from the vertical drain pan. See Figure 11. Relocate the deflector with s-clips on the Horizontal Drain Pan lined up to the coil support bracket. See Figure 12. This positions the deflector below the feeder tubes to channel the condensate to the drain pan.

NOTICE

The condensate deflector should be installed in the s-clip section which is inside the drain pan edge. See Figure 12.

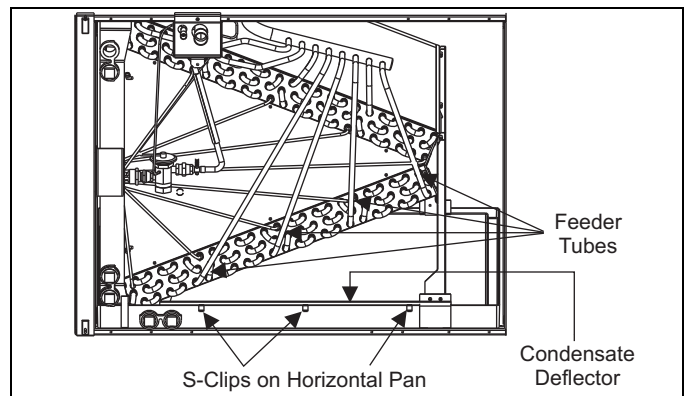


FIGURE 11: Condensate Deflector on Horizontal Drain Pan Edge

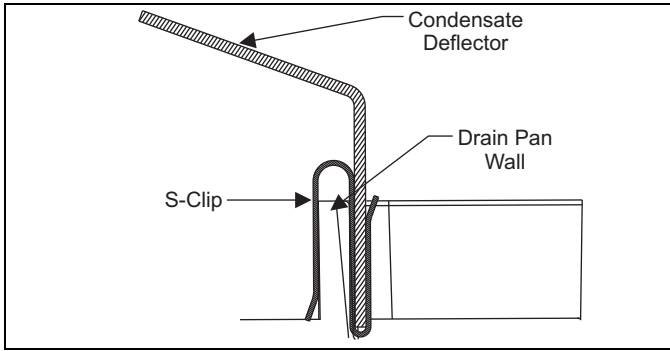


FIGURE 12: S-Clip Installation

SECTION VII: REFRIGERANT LINE CONNECTION

CAUTION

Coil is under inert gas pressure. Relieve pressure from coil by removing rubber plug or by depressing schrader core.

CAUTION

Dry nitrogen should always be supplied through the tubing while it is being brazed, because the temperature required is high enough to cause oxidation of the copper unless an inert atmosphere is provided. The flow of dry nitrogen should continue until the joint has cooled. Always use a pressure regulator and safety valve to insure that only low pressure dry nitrogen is introduced into the tubing. Only a small flow is necessary to displace air and prevent oxidation.

Connect lines as follows:

NOTICE

Route the refrigerant lines to the coil in a manner that will not obstruct service access to the coil, air handling system, furnace flue or filter.

1. Suction and liquid line connections are made outside the cabinet. Leave the tubing connection panel attached to the cabinet with the tubes protruding through it. Coil access panel should be removed for brazing. The lines are expanded to receive the field line set tubes.
2. Cut the end of the suction tube using a tube cutter. Place the tube cutter as close as possible to the end of the tube to allow more space for the connection and brazing of the suction line.
3. Wrap a water soaked rag around the coil connection tubes inside the cabinet to avoid damaging the TXV bulb.
4. Remove grommets where tubes exit the cabinet to prevent burning them during brazing.
5. Purge refrigerant lines with dry nitrogen.
6. Braze the suction and liquid lines.
7. Re-attach the grommets to the lines carefully to prevent air leakage.
8. Attach the coil access panel to the cabinet.

Refer to Outdoor unit Installation Manual for evacuation, leak check and charging instructions.

Lines should be sound isolated by using appropriate hangers or strapping.

All evaporator coil connections are copper-to-copper and should be brazed with a phosphorous-copper alloy material such as Silfos-5 or equivalent. DO NOT use soft solder.

SECTION VIII: COIL CLEANING

If the coil needs to be cleaned, it should be washed with Calgon Cal-Clean (mix one part CalClean to seven parts water). Allow solution to remain on coil for 30 minutes before rinsing with clean water. Solution should not be permitted to come in contact with painted surfaces.

SECTION IX: AIR SYSTEM ADJUSTMENT

To check the CFM, measure the static pressure drop across the coil using a portable manometer and static pressure tips. To prepare coil for static pressure drop measurements - the system should have been recently operational in cooling mode.

NOTICE

Table 6 below has WET coil data. Run system for approximately 15 minutes in cooling mode prior to taking measurements.

Drill 2 holes, one 3" after the coil (before any elbows in the ductwork) and one 3" before the coil. Insert the pressure tips and read the pressure drop from the manometer. See Table 4 to determine the air flow, and make the necessary adjustments to keep the CFM within the air flow limitations of the coil.

TABLE 6: Air Flow Data - Static Pressure Drop

Coil Size	CFM @ Static Pressure Drop - IWG (Based on wet coil)				
	0.10	0.15	0.20	0.25	0.30
18A	400	550	710	880	1000
18B	425	620	830	970	1125
24A	400	600	800	950	1075
24B	425	725	900	1075	1215
30A	425	600	800	950	1075
30B	450	725	900	1075	1215
32A	555	725	865	970	1080
35B	600	800	950	1090	1220
35C	792	1007	1206	1382	1572
36A	625	775	925	1025	1125
37A	689	880	1031	1180	1300
36B	825	976	1174	1300	1450
36C	975	1225	1375	1575	1775
42B	825	1000	1175	1325	1450
42C	1025	1275	1475	1650	1850
43C	785	1025	1210	1400	1570
48C	900	1075	1300	1475	1600
48D	1008	1224	1451	1620	1788
60D	1160	1432	1598	1750	1870
62D	1240	1532	1709	1870	2000
64D	1152	1362	1573	1783	1994

**SECTION X: INSTALLATION
VERIFICATION**

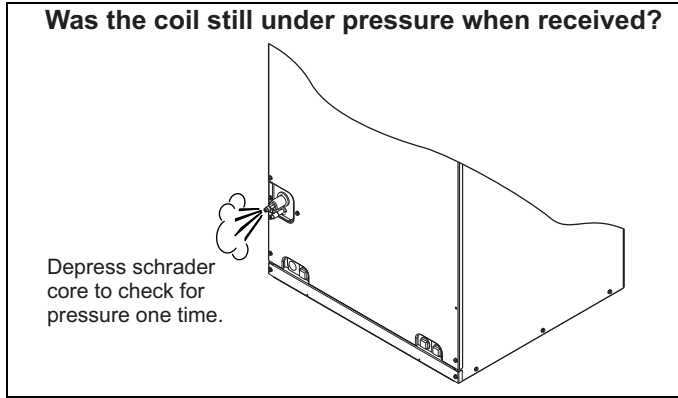


FIGURE 13: Pressure Check

Is coil metering device installed correctly?

- Was the correct TXV installed per the outdoor unit instructions?
- Is the TXV Bulb positioned correctly?
- Is Bulb Insulated?
- Is Equalizer Line connected?

FIGURE 14: TXV Check List

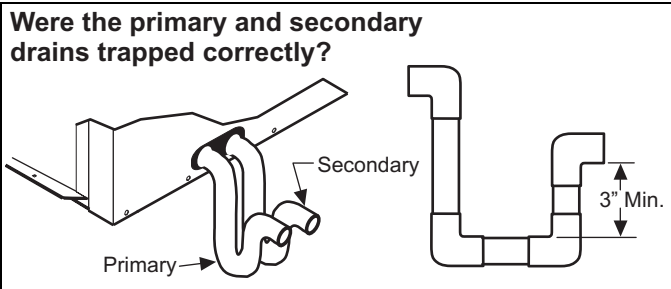


FIGURE 15: Drain Traps

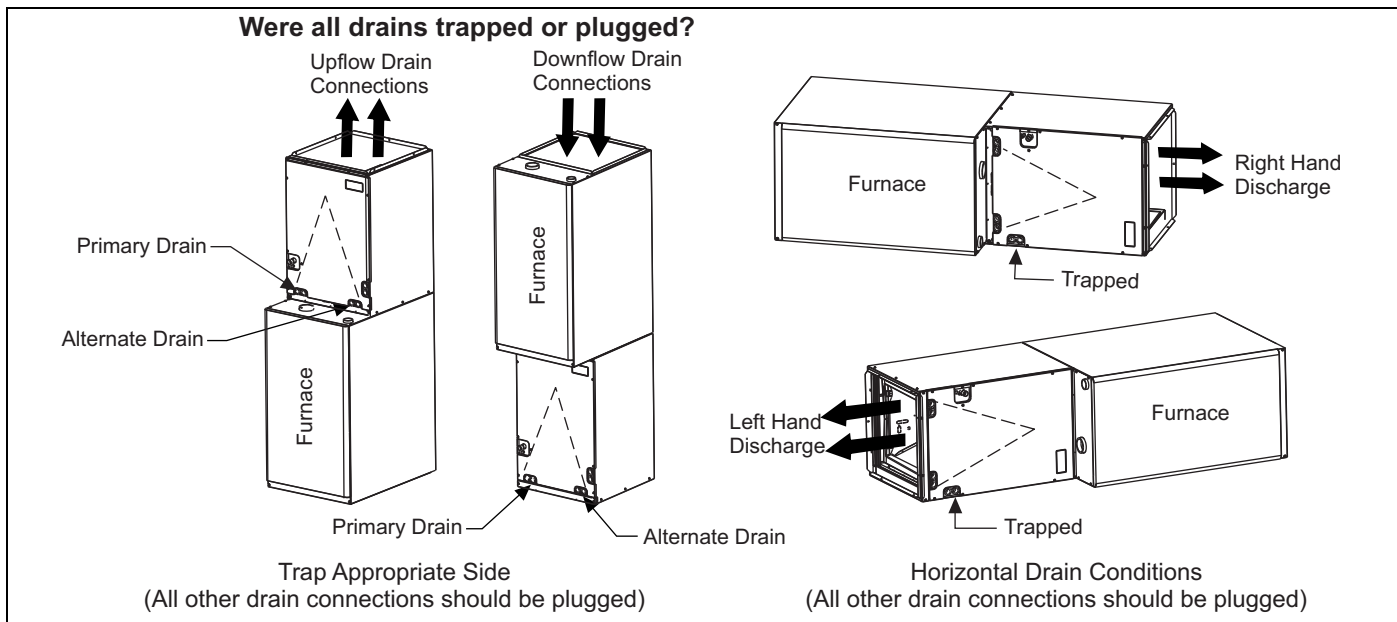


FIGURE 16: Location of Trapped and Plugged Drain Connections